

TABELLE CODIFICHE STANDARD / STANDARD ORDERING CODES

Decodifica standard range dei convertitori - <i>Standard transmitters range ordering code</i>			
Inizio scala (°C) <i>Start range (°C)</i>	Codice - <i>Code</i>	Fine scala (°C) <i>End range (°C)</i>	Codice - <i>Code</i>
0	A	+30	0
-10	B	+50	1
-20	C	+70	2
-30	D	+100	3
-40	E	+150	4
-50	F	+200	5
-80	G	+250	6
-100	H	+300	7
-150	I	+350	8
-200	J	+400	9
		+450	A
		+500	B
		+550	C
		+600	D
		+650	E
		+700	F
		+750	G
		+800	H
		+850	I
		+900	J
		+950	K
		+1000	L
		+1100	M
		+1200	N
		+1300	O
		+1400	P
		+1500	Q
		+1600	R
		+1700	S
		+1800	T

Decodifica standard range dei convertitori

Standard transmitters range ordering code